 


vtech®

Instruction Manual

Toot-Toot Drivers®

Super Circuit RC Raceway

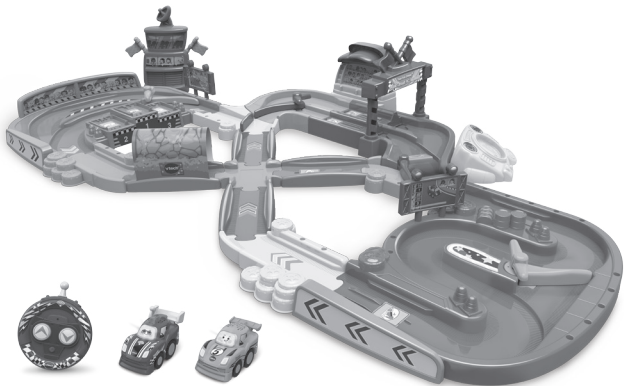

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® Super Circuit RC Raceway**.

Experience the excitement of high-stakes competitive racing with the **Toot-Toot Drivers® Super Circuit RC Raceway**. It's time to race for the checkered flag!

30 Play Set
Pieces

11 SmartPoint™
Locations

One Tunnel



INCLUDED IN THE PACKAGE



One **SmartPoint™**
RC Racer



 
One **SmartPoint™**
Motorised Racer




Remote Control




A

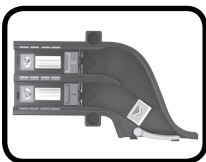


B

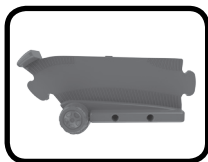 


C

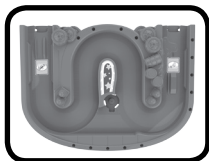 


D

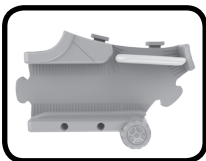 


E

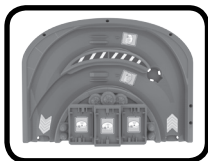 

F

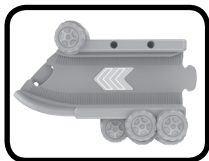 

G

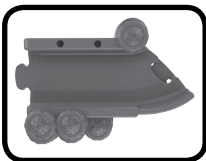 

H



 
I




J




Two K

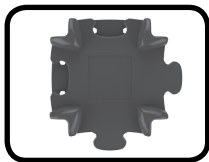


L

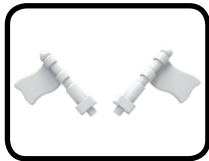 


Two flags

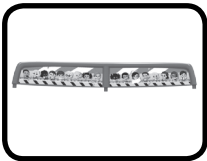 

One stadium plate

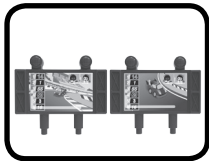 

Two score boards

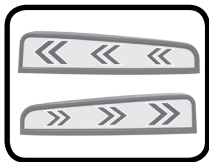 

Two curve signs



One archway
banner



Two archway
supports



One stand roof



 
One stand




One pressroom



One remote control stand

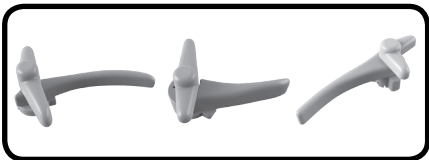


Three switcher gates

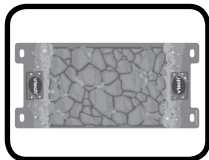 

One tunnel



 One Quick Start Guide

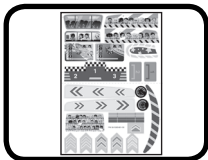

One label sheet

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE

Please save this Instruction Manual as it contains important information.

If there are no locks inside the package, disregard this message.

Removing the Packaging Locks:


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

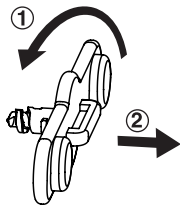

INSTRUCTIONS

Battery Removal And Installation -- Vehicle

 1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the bottom of the **Race Cars**, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

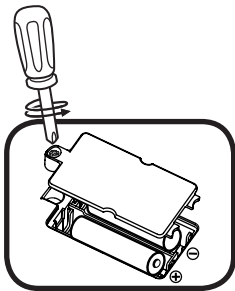


WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal And Installation -- Remote Control

 1. Find the battery cover located on the bottom of the **Remote Control**, use a screwdriver to loosen the screw and then open the battery cover.
2. Remove old batteries by pulling up on one end of each battery.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
4. Replace the battery cover and tighten the screw to secure.

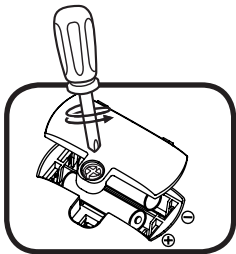

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
www.vtech.co.uk/recycle

 
 
 
 
 
 
 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION


Please stick the labels to the play set securely as indicated on the following page:

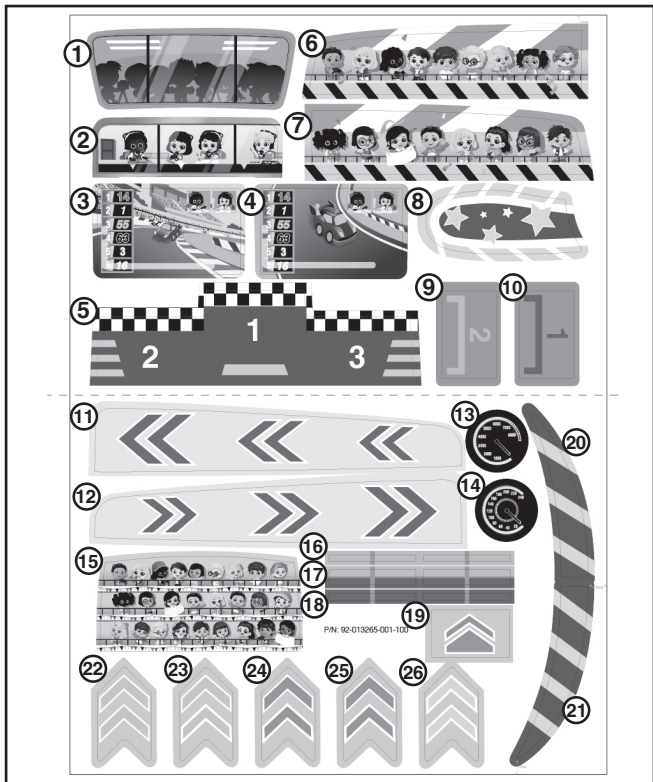

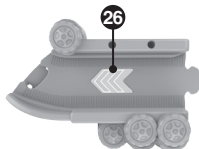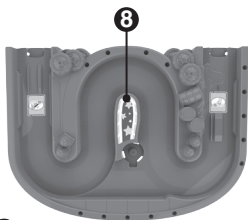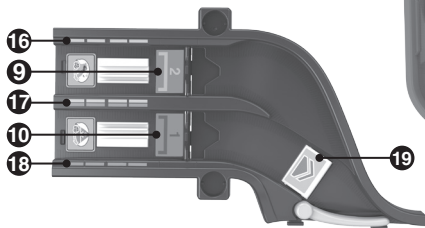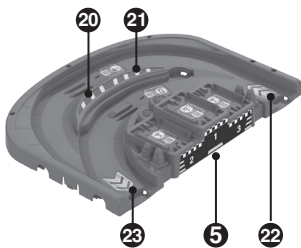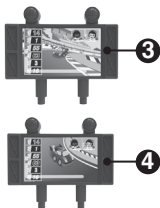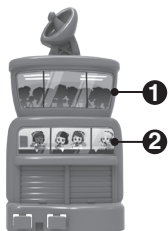


ASSEMBLY INSTRUCTIONS

 With the VTech® Toot-Toot Drivers® Super Circuit RC Raceway, safety comes first. To ensure your child's safety, adult assembly is required.

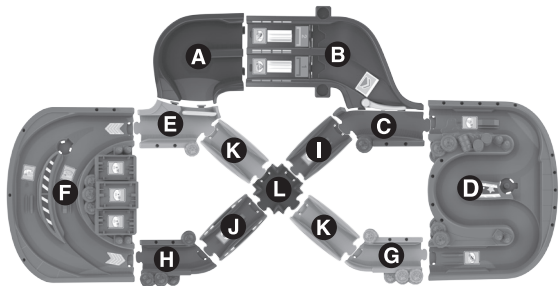


Assemble and attach the track components following the steps below:




 
1. Attach track A to track B to form the starting line.

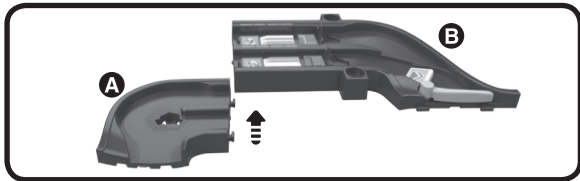


2. Attach track A to track E and track B to track C.

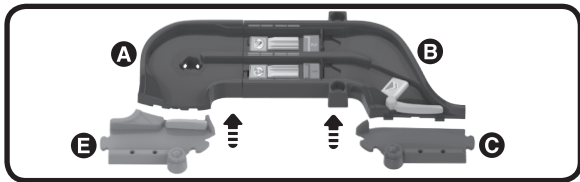 

    
3. Continue connecting all the other tracks following the reference photo on page 11. The positions of tracks I, J and K can be changed freely by changing the direction of track L.

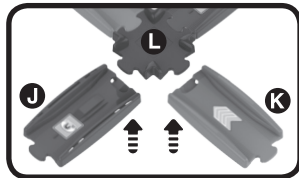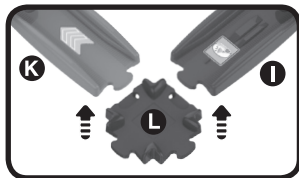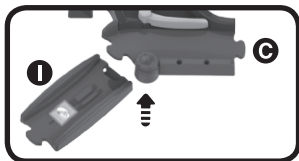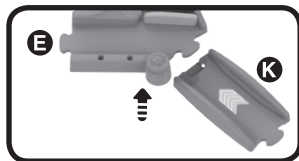



4. Attach track J to track H and track K to track G.

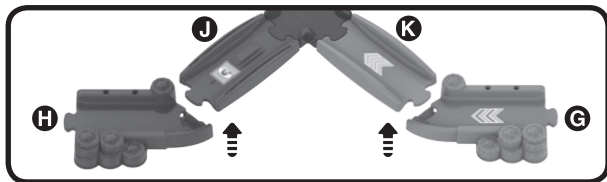 



5. Attach track H&E to track F and track C&G to track D.

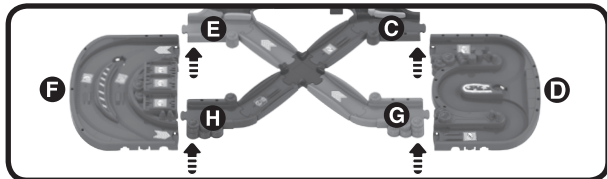 

 
 
6. Position the red gate switch on track A and the shorter green gate switch on track D.

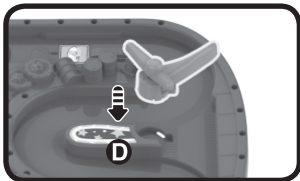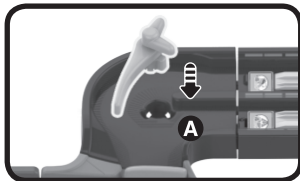

 
 
7. Position the longer green gate switch on track F, and attach the remote control stand on the side of track B.

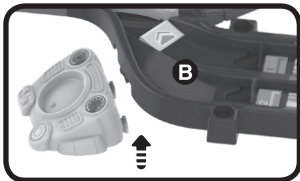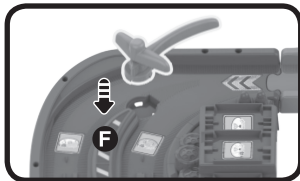

  
8. Insert two archway banner supports into the archway banner. Snap the archway banner at the starting line on track B.

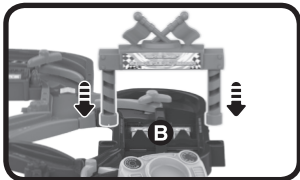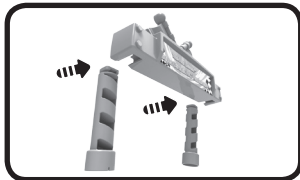


 
 
9. Insert the tunnel into track J.

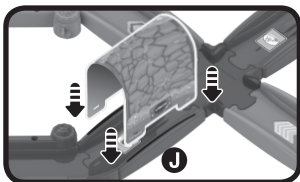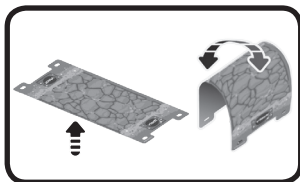


 
10. Snap the stand roof to the top of the stands. Attach the stands to the side of tracks A and B.

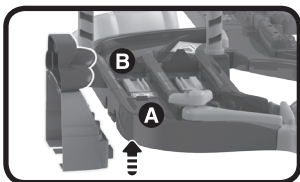

   
11. Insert one of the curve signs on the side of track D. Insert another curve sign and the stadium plate on the side of track F.

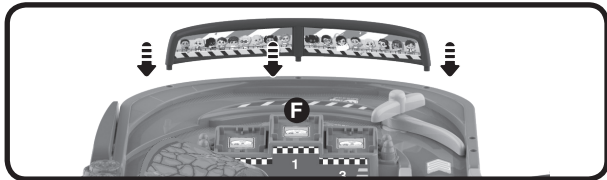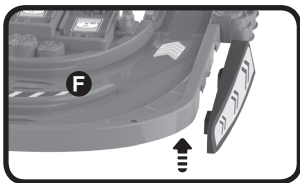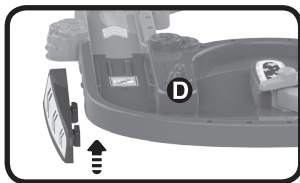

  
12. Insert two flags into the pressroom. Insert the pressroom on the side of track F.

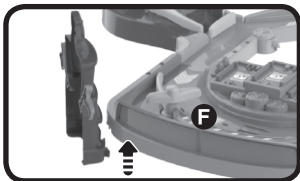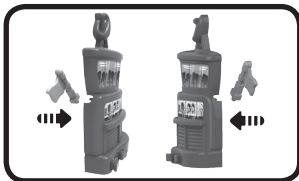

  14. Slide the two score boards onto the holes on the sides of the tracks. The flags will also fit these holes.

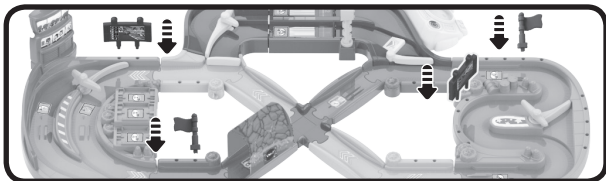

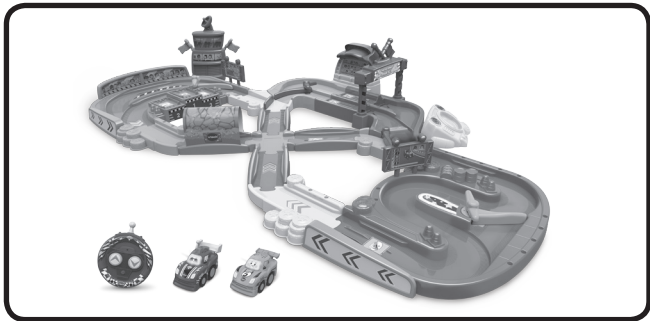


Once you've completed the above steps, you are ready to play! Let the vehicles run in the direction of the arrows. Driving in the opposite direction will cause the vehicle to be blocked by the track features.





PRODUCT FEATURES

1. Power Switch - Vehicles

 To turn the unit **On**, slide the **Power Switch** to the **On** () position. To turn the unit **Off**, slide the **Power Switch** to the **Off** () position.

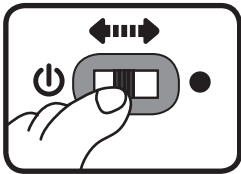


For your child's safety, use the motorised or RC cars only on the Toot-Toot Drivers® Super Circuit RC Raceway. Do not roll the car on your clothing, body or hair while the motorised car is turned on. Do not block the path of the car with any part of your body when the car is moving forwards or backwards. If something gets caught in the car's wheels while the motor is on, lift the car up so it is no longer touching your child or slide the power switch to the off position to turn off the motor. Adult supervision required.

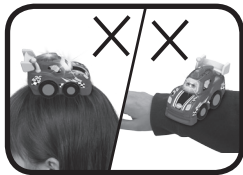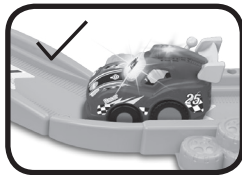  


2. Channel Selector Switch – Only for RC Racer

 To allow the **RC Racer** and **Remote Control** to function together, slide the **Channel Selector Switch** to the same channel on the **RC Racer** and **Remote Control**.

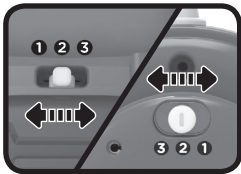

 Note: If two or three **RC Racers** are operating in the same vicinity, place each vehicle on a different channel (**1 2 3**).
(A maximum of three **RC Racers** can operate in one location.)

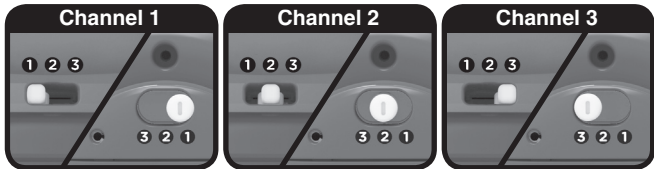

3. Forward/Backward Buttons – Only for RC Racer

Press the **Forward Button** or **Backward Button** on the remote to make the **RC Racer** go forwards or backwards. (The effective distance for the race car to recognise the remote control is about 3m to 6m. The distance will be shorter when the batteries are low.)



 
4. Automatic Shut-Off

To preserve battery life, the **RC Racer/Motorised Racer** will automatically power-down after approximately 100 seconds/5 minutes without input. The unit can be turned **On** again by pressing the Light Up Button or triggering a **SmartPoint™** location. (The remote control cannot wake up the RC Racer.)

Note: This product is in Try-Me mode in the packaging. After opening the package, turn the **RC Racer/Motorised Racer Off** and **On** again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES - RC Racer

1. Press the **Light Up Button** to hear fun phrases, songs, sounds and melodies. While a melody is playing, press the **Forward/Backward Button** on the **Remote Control** to add fun sounds on top of the melody. The windscreen light will flash with sounds.

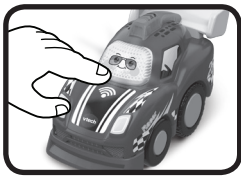


2. To drive the **RC Racer** with the **Remote Control**, ensure both the **RC Racer** and **Remote Control** are set to the same channel number with the **Channel Selector Switches**. Once both items are on the same channel, press the **Forward Button** or **Backward Button** on the **Remote Control** for some racing fun!



Note: For optimal performance, only play with your **RC Racer** indoors and out of direct sunlight.

 3. Navigate the **RC Racer** over one of the play set's eleven **SmartPoint™** locations on the **Toot-Toot Drivers® Super Circuit RC Raceway** to see the **RC Racer's** lights flash and to hear fun sounds, short tunes and phrases.

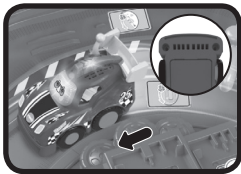

MELODY LIST

1. Entertainer
2. Hickory Dickory Dock
3. Humpty Dumpty
4. Incy Wincy Spider
5. Little Miss Muffet
6. Old King Cole

SONG

Song 1

My engine roars loud,
my wheels spin fast.
My show is about start,
Come and watch me win!

Song 2



I'm the super star on the race track,
I zoom around like lightning.
I want to win first place as the flag comes down!

Song 3

Toot-Toot Drivers!
I'm a Toot-Toot Drivers! Race car.
Come race me if you can. (Toot-Toot!)
I'll zoom at my full speed.
Let's Go! Go! and see! (Toot-Toot!)

ACTIVITIES - Motorised Race Car

  1. Press the **Light Up Button** to hear fun phrases, songs, sounds and melodies. The light will flash with the sounds.
2. Place the **Motorised Race Car** on one of the play set's eleven **SmartPoint™** locations to see the **Motorised Race Car's** lights flash and to hear fun sounds, short tunes and phrases.

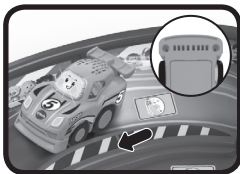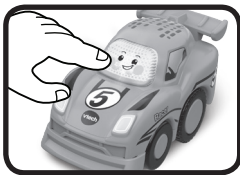

MELODY LIST

1. London Bridge
2. Yankee Doodle
3. Aiken Drum
4. Diddle, Diddle Dumpling
5. Flying Trapeze
6. Funiculi, Funicula

SONG

Song 1

Looking forward to have a speedy race,
chase each other,
race each other.

Looking forward to have a speedy race,
I'll try my very best!.

Song 2

When I take the lead,
I feel good!
When I fall behind,
I try harder!

Song 3

Toot-Toot Drivers!
I'm a Toot-Toot Drivers super race car.
I love to accept a challenge! (Toot-Toot!)
I'll see you on the race track.
Let's Go! Go! and see! (Toot-Toot!)

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

