

**vtech**<sup>®</sup>


Parent's Guide

**Toot-Toot  
Drivers**<sup>®</sup>



## Extreme Stunt Set



91-003359-001 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **vtech Baby**

**Toys that will stimulate their interest in different textures, sounds and colours**

#### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

#### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

#### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

**Birth-36 months**




**3-6 years**



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Toot-Toot Drivers® Extreme Stunt Set** by **VTech®**! Little racers will love watching the monster truck launch over two jump zones. Place the monster truck on the **Press 'n' Go** zone to make the flames spin.

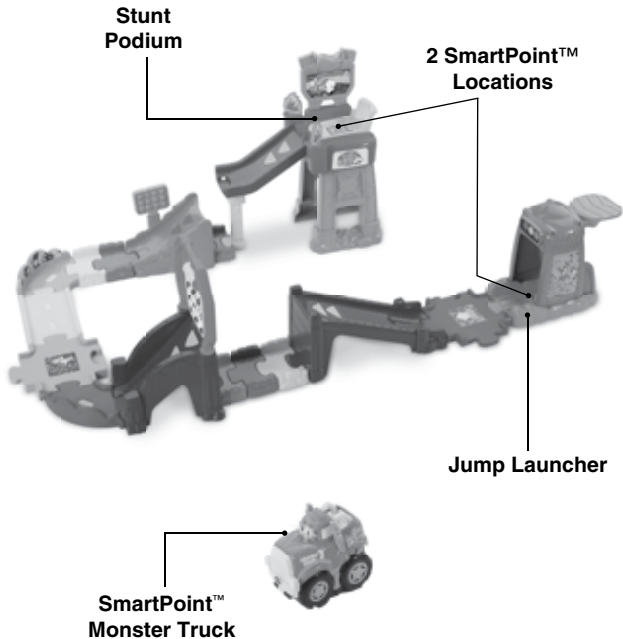

# INCLUDED IN THIS PACKAGE



**SmartPoint™**  
Monster Truck




One **SmartPoint™**  
launcher



One **SmartPoint™**  
podium platform



One  $\frac{3}{4}$  straight track

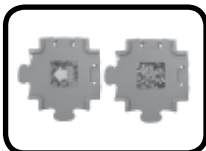

Two cross tracks



One long ramp track



One short  
ramp track



One podium  
landing track



Three  $\frac{1}{4}$  straight  
tracks



Two  $\frac{1}{4}$  straight  
tracks, female



One 90-degree  
track, female



One 90-degree  
track, male



One  $\frac{1}{4}$  straight track, male



One small track support




Two large podium supports



One podium jump track



One jump light

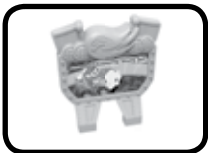


One podium board



One ramp sign



One ramp gate

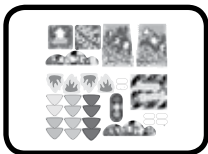

One label sheet

- One track configuration sheet
- One parent's guide

**WARNING:**


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

Adult assembly required. For your child's safety, do not let your child play with the toy until it is fully assembled.



**Unlock the packaging lock:**

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

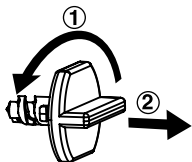

**WARNING:**

For your child's safety, do not press and release the vehicle on clothing, body or hair.

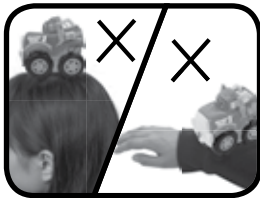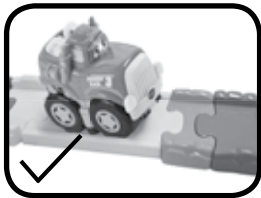


# GETTING STARTED

## BATTERY INSTALLATION

### Monster Truck

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the monster truck. Use a screwdriver to loosen the screw.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure the battery cover.

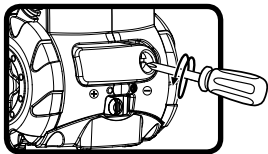

### BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:


 




[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)



# LABEL APPLICATION

Please securely stick the labels to the play set as indicated below:

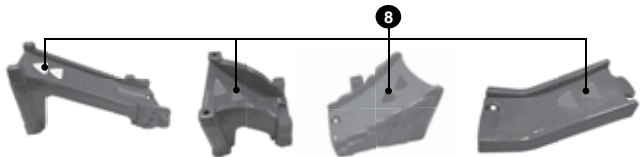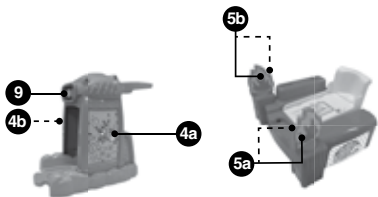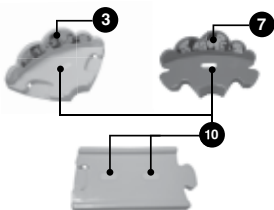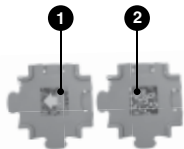
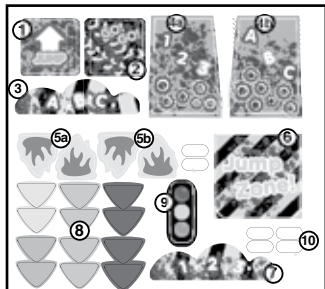


# ASSEMBLY INSTRUCTIONS


## Extreme Stunt Set

With the VTech® Toot-Toot Drivers® Extreme Stunt Set, safety comes first. To ensure your child's safety, adult assembly is required.


1. Insert the two **Large Podium Supports** into the slots underneath the **SmartPoint™ Podium Platform**. Then, insert the **Podium Board** into the **SmartPoint™ Podium Platform**, as shown below.

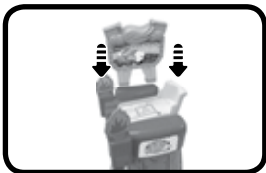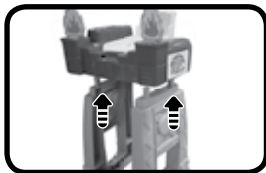

2. Insert the **Small Track Support** into the slot underneath the **Podium Jump Track**. Then, connect the **SmartPoint™ Podium Platform** to the **Podium Jump Track**, as shown below.

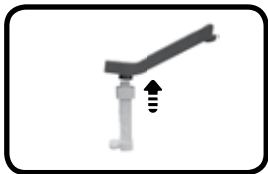

3. Attach the **Ramp Gate** to the **Ramp Sign**. Then, insert the **Ramp Gate** to the **Short Ramp Track**, as shown below.

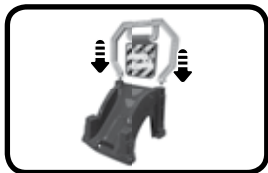


4. After the above steps, connect these pieces to the included track pieces. You can configure them into different arrangements.



## EXPAND & EXPLORE

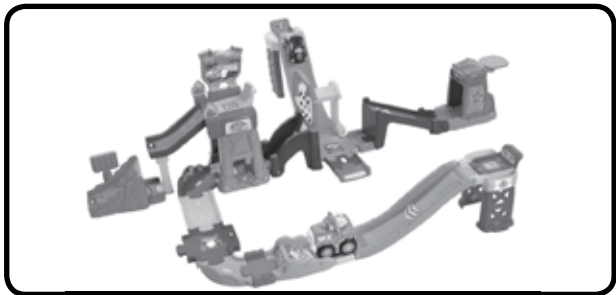

Connect to the **Toot-Toot Drivers® Extreme Stunt Set** (as shown below) or other **Toot-Toot Drivers®** play sets (each sold separately) to expand the **Extreme Stunt Set** and inspire creativity.




## PRODUCT FEATURES

### Monster Truck

#### 1. ON/OFF SWITCH

To turn the monster truck **ON**, slide the **ON/OFF SWITCH** to the **ON** (  ) position. To turn the monster truck **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (  ) position.

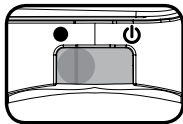

#### 2. AUTOMATIC SHUT OFF


To preserve battery life, the included monster truck will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pressing the light up button, pushing the vehicle along quickly, initiating the press and release feature or by triggering a **SmartPoint™** location.

**Note:** If the unit shuts off while playing, we suggest changing the batteries.

# ACTIVITIES

## Monster Truck

1. Slide the **ON/OFF SWITCH** to turn the monster truck **ON**. You will hear a song, a fun phrase and sounds. The light will flash with the sounds.

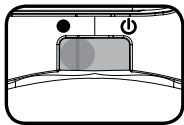

2. Press the **LIGHT UP BUTTON** to hear sounds, songs and phrases. The light will flash with sounds.



3. Press down on the monster truck quickly or slowly to hear fun sounds and phrases. Release the monster truck to watch it roll forward on its own. The light will flash with the sounds.



4. Push the monster truck to hear fun sounds and melodies. While a melody is playing, push the monster truck again to add in fun sounds on top of the melody. The light will flash with the sounds.



5. For added fun, the monster truck interacts with the **Too-Toot Drivers® Extreme Stunt Set**. Simply place the monster truck on one of the two **SmartPoint™** locations to see the monster truck's light flash and to hear fun sounds, short tunes and phrases. The monster truck even interacts with other **Too-Toot Drivers®** play sets (each play set sold separately).



**Note:** For optimal performance, we recommend using **Press 'n' Go** vehicles on smooth flat surfaces or **Toot-Toot Drivers**® tracks. For children's safety, please do not place the truck on the head, skin or clothes.

## ACTIVITIES

### Extreme Stunt Set

#### 1. SmartPoint™ Locations

Place the **Press 'n' Go** monster truck or any **SmartPoint™** vehicle (each sold separately) on the two **SmartPoint™** locations to trigger fun sounds, songs or phrases.


#### 2. SmartPoint™ Jump Launcher

Put the monster truck in the **SmartPoint™ Jump Launcher**. Press down on the launcher lever firmly to send the monster truck out and up the ramp!



#### 3. SmartPoint™ Podium Platform

Put the monster truck on the **SmartPoint™ Podium Platform**, press down on the back of the monster truck and release it to watch the flames spin and launch the truck off the **Podium Platform**.

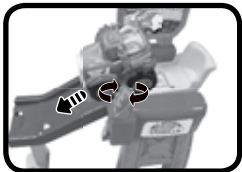

# SING-ALONG SONG LYRICS

## SONG 1

There was a truck,  
That loved to jump,  
Let's put on a show!

## SONG 2

Jump up high,  
Watch me fly,  
One car to jump,  
Two cars to jump,  
Watch me fly!

## SONG 3

My engine's powerful,  
My body's strong,  
My tyres get me around all day long!

# MELODY LIST

1. Alexander's Ragtime Band
2. A Bicycle Built for Two
3. BINGO
4. Camptown Races
5. Glow Worm
6. Humpty Dumpty
7. Incy Wincy Spider
8. London Bridge
9. Pat-a-Cake
10. Turkey in the Straw

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.



**IMPORTANT NOTE:**

Creating and developing VTech® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1  
LED PRODUCT



# PRODUCT REGISTRATION

Visit [www.vtech.co.uk/clubvtech/login](http://www.vtech.co.uk/clubvtech/login)  
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



## PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at [www.vtech.co.uk/warranty](http://www.vtech.co.uk/warranty)

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtech.co.uk***

