

vtech[®]

Parent's Guide

TOOT-TOOT
CORY
CARSON[®]

DJ Train Trax & the Roll Train



91-003795-000 ^{UK}

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Cory Carson® DJ Train Trax & the Roll Train!**

Get ready to dance with Cory, Chrissy and DJ Train Trax! Help Cory and Chrissy dance on stage or roll DJ Train Trax to light up his rainbow smokestack while building motor skills and listening to sounds and phrases from the show. *Wicky-wicky, woo-woo!*

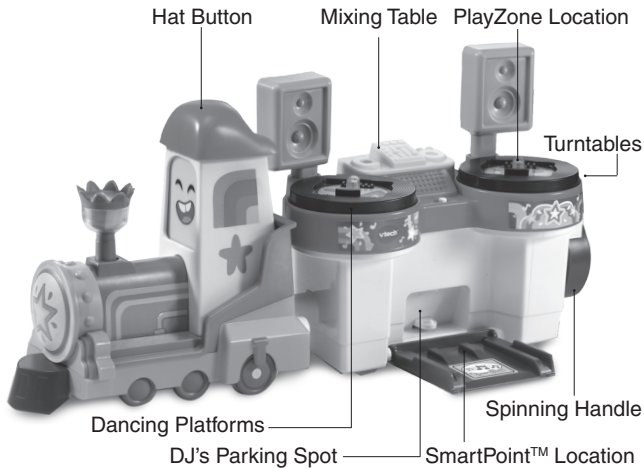

Mini Cory



Mini Chrissy

INCLUDED IN THIS PACKAGE

Too-Too Cory Carson® DJ Train Trax & the Roll Train



One DJ Train Trax



One mixing table



One mini Cory



One mini Chrissy



Parent's Guide

NOTE:

This toy is not intended for teething.

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE:

Please keep this Parent's Guide as it contains important information.

Removing the packaging locks

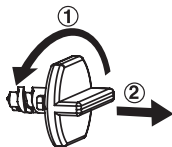

 - ① Turn the packaging lock anticlockwise several times.
- ② Pull out the packaging lock and discard.

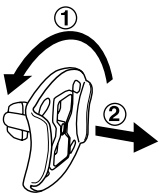


- ① Rotate the packaging lock 90 degrees anticlockwise.
- ② Pull out the packaging lock and discard.

GETTING STARTED

Battery Removal and Installation


DJ Train Trax

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of **DJ Train Trax**. Then, use a screwdriver to loosen the screw and remove the cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

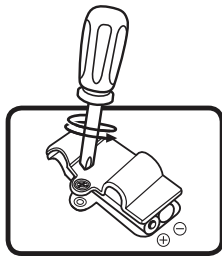

Mixing Table

 1. Make sure the unit is turned **OFF**.
2. Locate the green battery cover on the top of the **Mixing Table**. Then, use a screwdriver to loosen the screw and remove the cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

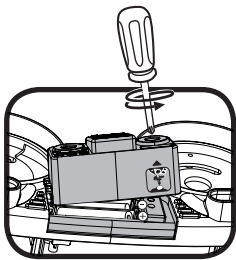

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

 
www.recyclenow.com

PRODUCT FEATURES

DJ Train Trax

1. On/Off Switch

To turn **DJ Train Trax ON**, slide the **On/Off Switch** to the **ON** ☐ position. To turn **DJ Train Trax OFF**, slide the **On/Off Switch** to the **OFF** ● position.

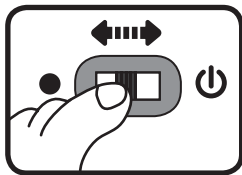

2. Automatic Shut-Off

To preserve battery life, **DJ Train Trax** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by pressing the **Hat Button** or pushing **DJ Train Trax** quickly.

 
NOTE:

This product is in Try Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

Mixing Table

1. On/Off Switch

To turn the **Mixing Table ON**, slide the **On/Off Switch** to the **ON** ☐ position. To turn the **Mixing Table OFF**, slide the **On/Off Switch** to the **OFF** ● position.

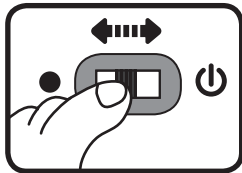

2. Automatic Shut-Off

To preserve battery life, the **Mixing Table** will automatically shut off after approximately 35 seconds without input. The unit can be turned on again by putting **Mini Cory** or **Mini Chrissy** on the **Mixing Table**, twisting the **Turntables**, turning the **Spinning Handle** or placing **DJ Train Trax** in **DJ's Parking Spot**.

NOTE:

 
This product is in Try Me mode in the packaging. After opening the package, remove **Mini Cory** and **Mini Chrissy**, place **DJ Train Trax** in **DJ's Parking Spot** or take out and reinsert the batteries to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

ACTIVITIES

DJ Train Trax

1. Hat Button

Press the **Hat Button** to hear fun sounds, songs, phrases and melodies. The smokestack will flash with the sounds.

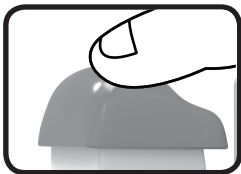

2. Sounds and Melodies

Push **DJ Train Trax** to hear fun sounds. While a melody or song is playing, continue pushing **DJ Train Trax** to add in fun sounds on top of the melody or song. The smokestack will flash with the sounds.



Mixing Table

1. PlayZone Location

Place **Mini Cory**, **Mini Chrissy** or other Toot-Toot Cory Carson® mini characters on the **PlayZone Location** to trigger fun sounds, short tunes and phrases.



 
2. Spinning Handle

When **Mini Cory** and **Mini Chrissy** are on the **Dancing Platforms**, turn the **Spinning Handle** or twist the **Turntables** to watch them dance. Lights will flash with the sounds.



3. DJ's Parking Spot

Place **DJ Train Trax** in **DJ's Parking Spot** to press the button and trigger fun sounds and short tunes. The lights will flash with the sounds.

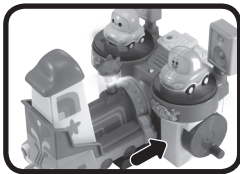


4. Turntables

Twist the **Turntables** on the **Dancing Platforms** back and forth to hear fun sounds, short tunes, phrases and a song. If a short tune or song is playing, twist the **Turntables** back and forth to add fun sounds on top of the music. The lights will flash with the sounds.



5. **SmartPoint™ Location**

 Place a SmartPoint™ character (sold separately) on the **SmartPoint™ Location** on **DJ's Parking Spot** to hear fun phrases and sound effects.

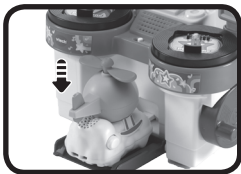

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2020 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003795-000 (UK)