

vtech[®]
baby

Instruction Manual

Discovery Zebra Laptop



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

The Discovery Zebra Laptop is black, white and fun all over! Buttons introduce shapes, letters and numbers while the roller, mouse and silicone poppers give little fingers a workout.

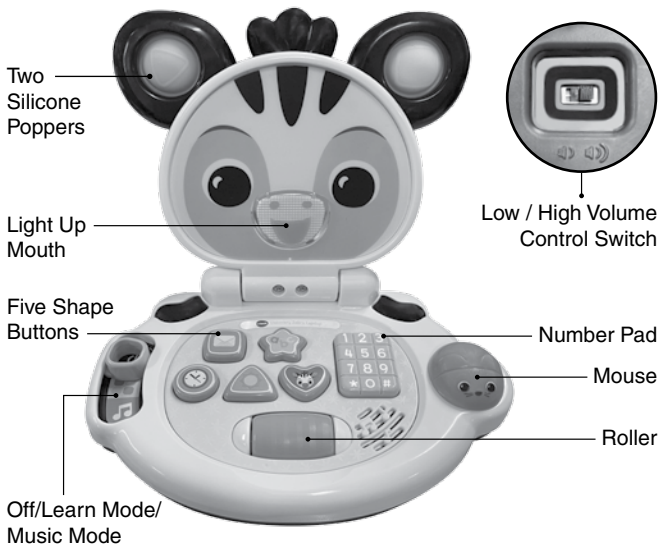

INCLUDED IN THIS PACKAGE

- Discovery Zebra Laptop
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

WARNING

 
Adult supervision is required

- When playing with the poppers, ensure they are kept an appropriate distance away from the eyes and face of you or another person.
- Do not put, or attempt to launch anything on the poppers.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

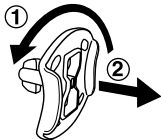


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover under the bottom panel of the electronic module. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.) Please make sure you put the bottom battery upon the strip of cloth, which is for the convenience of removing old batteries next time.
5. Replace the battery cover and tighten the screw to secure.

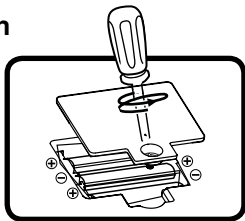

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

 
1. OFF/Learn/Music Mode Switch

To turn the unit **On**, slide the **OFF/Learn/Music Mode Switch** to the **Learn Mode** (🎮) or the **Music Mode** (🎵) position. To turn the unit **Off**, slide the **OFF/Learn/Music Mode Switch** to the **Off** (🔌) position.



2. Low/High Volume Control Switch

Slide the **Volume Control Switch** to select **High volume** (🔊) or **Low volume** (🔊).

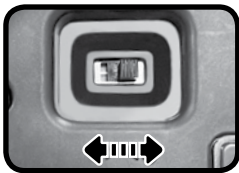

3. Automatic Shut-off

To preserve battery life, the **Discovery Zebra Laptop** will automatically power-down after approximately 20 seconds without input. The unit can be turned on again by pressing the shape buttons or number pad, or by switching to the other mode.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. OFF/Learn/Music Mode Switch

When turning the unit on, you will hear a power-on sound, phrase and song. Lights will flash along with some sounds.



2. 5 Shape Buttons

In **Learn Mode**, press the **5 Shape Buttons** for pretend app play, learn shapes, letters, Zebra facts, numbers, and hear 3 sing-along songs. Lights will flash along with some sounds. In **Music Mode**, press the **5 Shape Buttons** to have musical fun, hear 4 sing-along songs and 12 upbeat melodies. Lights will flash along with the sounds.



3. Number Pad

In **Learn Mode**, press the **Number Pad** to hear a song about counting, a phrase, a short tune and a fun sound. In **Music Mode**, press the **Number Pad** to hear a song about counting, and two upbeat melodies. Lights will flash along with the sounds.



4. Mouse, Roller, Silicone Poppers

Slide the mouse, spin the roller and press the poppers to help strengthen fingers.



MELODY LIST

1. Did You Ever See a Lassie?
2. Do You Know the Muffin Man?
3. London Bridge
4. Where Has My Little Dog Gone?
5. There Is a Tavern in the Town
6. Pat-a-cake
7. Happy Farmer
8. Old King Cole
9. Little Miss Muffet
10. Here We Go Round the Mulberry Bush
11. Humpty Dumpty
12. One, Two Buckle My Shoe

SONG LYRICS

Song 1

Tap the keys, learn and play!

Time with you lights up my day!

Song 2

A B C D E F G

H I J K L M N O P

Q R S

T U V

W X Y and Z.

Song 3

1, 2, 3, 4, 5,

6, 7, 8 and 9!

Learning to count is fun!

Sing and count every day!

Song 4

Listen to some beats!

Sing about letters and numbers,

While we play today!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.
6. If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Phone: 0800 400 785
Website: support.vtech.com.au

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

