

BLUEY



Instruction Manual

HOORAY DRUM SET

 


BBC
STUDIOS

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996

INTRODUCTION

Thank you for purchasing the **VTech® Hooray Drum Set**. Play the **Hooray Drum Set**, just like in the show! Play along to 16 Bluey melodies and sung songs, choose different drum sounds and hear character sounds. With three modes of play, fun sound effects and light-up musical play, there's endless music fun!

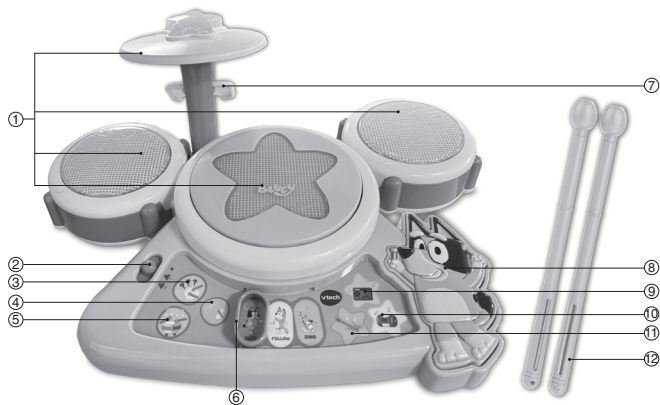

- | | |
|---------------------------------|-----------------------------|
| ① Light Up Drum Pad | ⑦ Drumstick Holder |
| ② Power Switch & Volume Control | ⑧ Bluey Button |
| ③ Drum Sounds Button | ⑨ Music Button - Electronic |
| ④ Drum Solo Button | ⑩ Music button - Pop |
| ⑤ Drum Fills Button | ⑪ Music button - Country |
| ⑥ Mode Selector | ⑫ Drumsticks |

INCLUDED IN THE PACKAGE

- 1 VTech® Hooray Drum Set
- 2 Drumsticks
- 1 Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

 
ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

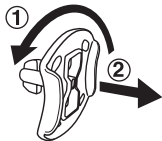

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

GETTING STARTED



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

 


ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.).
5. Replace the battery cover and tighten the screw to secure.

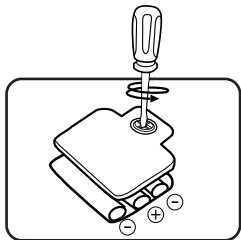

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

PILES RECHARGEABLES

 
- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

Note:

 
If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

INSTRUCTIONS

1. Unfold the stand at the back.

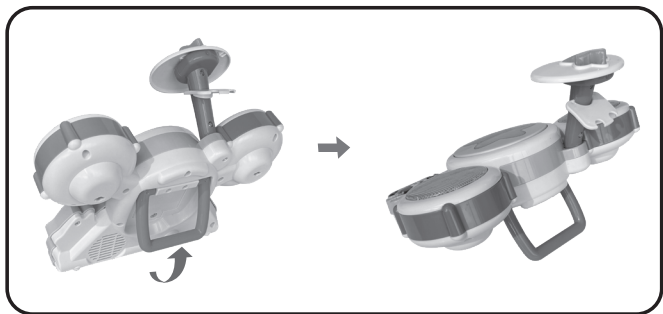

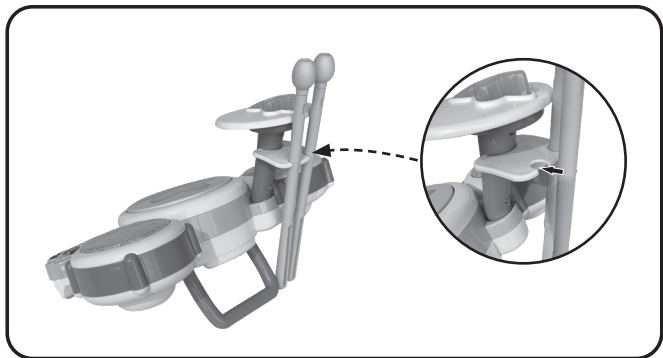


2. Place the drum sticks back into the holder when not used.



PRODUCT FEATURES

1. Power Switch & Volume Control

To turn the unit **On**, slide the switch to the **LOW VOLUME**  or **HIGH VOLUME**  position. To turn the unit **Off**, slide the switch to the **Off**  position.



2. Mode Selector

Move the **Mode Selector** to choose from 3 modes.



3. Drum Sounds Button

Press the **Drum Sounds Button** to select different sets of sounds to play when you hit the drum pads.



4. Drum Fills Button

Press the **Drum Fills Button** to add short drum rhythms.



 
5. Drum Solo Button

Press the **Drum Solo Button** to mute the backing melody in mode 1. Press again to unmute the melody.




6. Music Buttons

Press the 3 **Music Buttons** to play a backing melody in 3 different styles of electronic, country and pop. Press each button repeatedly to choose among 3 melodies in mode 1.

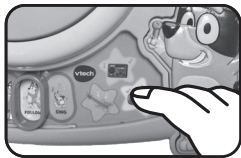


7. Bluey Button

  Press the **Bluey Button** to listen to theme music in mode 1. Press this button to listen to Bluey's voice in mode 2 and mode 3.

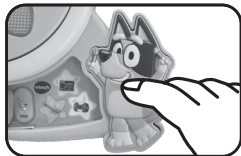



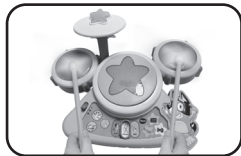

8. Light Up Drum Pads

Hit the **Drum Pads** to play drum sounds or other fun sound effects. Refer to **3. Drum Sounds Button** above about how to choose different drum sounds.



9. AUTOMATIC SHUT-OFF





To preserve battery life, **VTech® Hooray Drum Set** will automatically turn off after approximately 90 seconds without input. **VTech® Hooray Drum Set** can be woken up again by switching **ON** again in **Power Switch**, **change mode** or pressing the **Music Buttons**  , **Drum Solo Button**  , **Drum Fills Button**  or **Drum Sounds Button**  .

VTech® Hooray Drum Set will also automatically turn **OFF** when the battery power is very low.

NOTE: If the unit powers down or if the light fades out during play, please install a new set of batteries.

MODES

1. Play



Hit the **Drum Pads** however you'd like to play along to the song and add drum sounds. Press the **Drum Sounds Button**  to change the drum sound effect that plays when you hit the pads. Press one of the **Music buttons**  to play or change the background music. Press the **Drum Solo Button**  to mute and unmute the backing melody. Press the **Drum Fills Button**  to add a drum rhythm. Press the **Bluey Button** to give Bluey theme music.

2. Follow

This is a memory game. Watch the pattern of lights as they appear on the **Drum Pads**. Then try to repeat the same pattern. See if you can follow the pattern while also keeping the rhythm.

3. Sing

Songs and melodies will be played alternatively. When Bluey asks how many flying saucers or green bottles you are thinking of, hit the **Drum Pads** 1 to 10 times as you like. Then Bingo and Bluey will sing the song with the number you hit.

When playing a song or a melody, press the **Bluey Button** to listen to Bluey's voice, or play with the **Drum Pads**, **Drum Sounds Button**  and **Drum Fills Button**  to add drum sounds to the music.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5734
Product Name: Hooray Drum Set
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
CAN ICES-003(B)/NMB-003(B)

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

