

Touch & Teach Elephant



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Teach Elephant** learning toy!

Go on an adventure with the **Touch & Teach Elephant** by **VTech®** and learn numbers, phonics, first words and more while exploring 16 interactive pages. Press the 8 number buttons to learn about animals, animal sounds, numbers and hear musical notes.

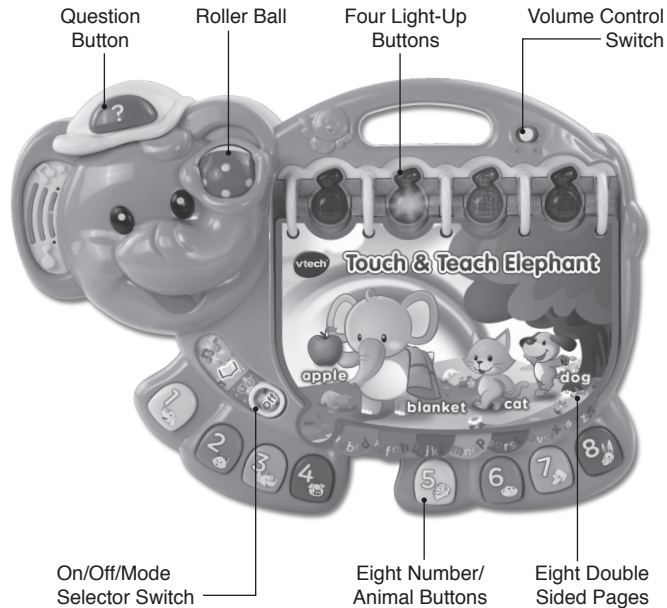


INCLUDED IN THIS PACKAGE

- One VTech® Touch & Teach Elephant learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this instruction manual as it contains important information.

 Unlock the packaging locks:

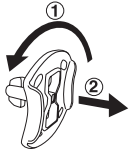


- ① Rotate the packaging lock counter-clockwise 90 degrees.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

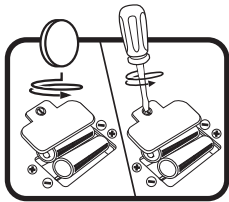

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **PHONICS MODE**, **STORY MODE** or the **MUSIC MODE** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.



2. VOLUME CONTROL SWITCH

Slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position to adjust the volume.



3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **VTech® Touch & Teach Elephant** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES


1. Slide the **mode selector switch** to choose a mode of play. You will hear a cheerful song and an instructional phrase. The lights will flash along with the sounds.



2. Press the **light-up buttons** to do the following: learn phonic sounds, animal names and sounds, objects and more in Phonics Mode; read interesting short stories with fun sounds and short tunes in Story Mode; and hear a variety of short tunes and melodies in Music Mode. In all modes, the lights will flash with the sounds.

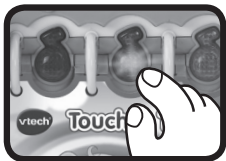

 
3. Turn the **book pages** to hear magical sounds, short tunes, or some playful phrases, depending on the selected mode. The lights will flash along with the sounds.

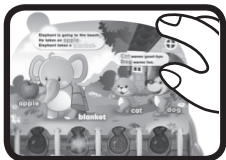

4. Press the **number/animal buttons** to do the following: learn numbers and counting 1 to 8 in Phonics Mode; learn animal names and sound effects in Story Mode; and play piano notes in Music Mode. While a melody is playing, press the number buttons again to play the tune one note at a time. In all modes, the lights will flash with the sounds.



 5. Press the **question button** to hear random questions about numbers, phonics, shapes, animals or objects, depending on the selected mode and page. Press the number/animal buttons or the light-up buttons to answer the questions. In all modes, the lights will flash with the sounds.

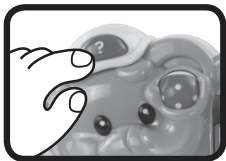

6. Spin the **roller ball** to hear fun sounds. The lights will flash along with the sounds.



MELODY LIST

1. Animal Fair
2. Teddy Bears' Picnic
3. The Entertainer
4. Camptown Races
5. If You're Happy and You Know It
6. Yankee Doodle
7. A-Ticket, A-Tasket
8. Old MacDonald Had a Farm
9. Bicycle Built For Two
10. Oranges and Lemons
11. Ring Around the Rosy
12. Pop! Goes The Weasel
13. Three Little Kittens
14. Humpty Dumpty
15. Bear Went Over the Mountain
16. Little Bo Peep
17. The Mulberry Bush
18. Goosey Goosey Gander
19. Frog Went A Courtin'
20. This Little Piggy

SING-ALONG SONG LYRICS

SONG 1

Elephant wants you to go on an adventure.
Open the book, there's lots to explore!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you.

Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK), or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

