

**vtech**<sup>®</sup>  
baby

Instruction Manual

# Twinkle Lights Owl



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Twinkle Lights Owl**. Meet babies' soft and cuddly owl friend! Owls starry light up tummy provides a soothing and calming environment for baby. Songs, melodies, nature sounds and gentle white noise soothes and relaxes little ones while the soft and textured fabrics provide tactile stimulation. Owls Heart Button triggers calming sounds, 3 songs and melodies. Owl responds when baby cries by playing one of the 33 soothing melodies.

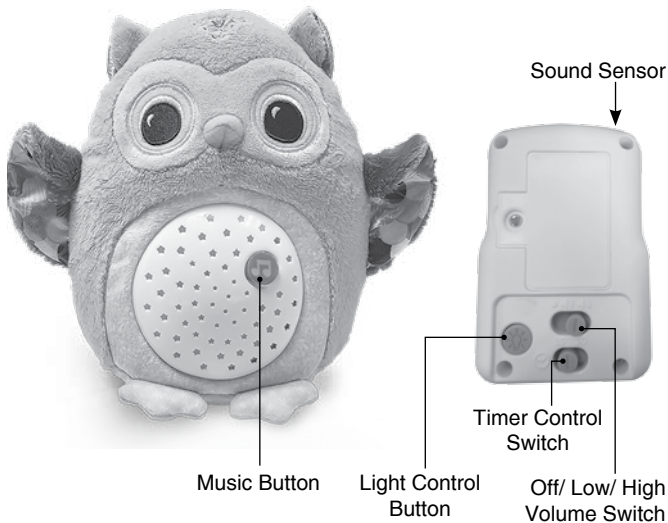

# INCLUDED IN THE PACKAGE

- VTech® Twinkle Lights Owl
- Quick Start Guide

## WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## WARNING:

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

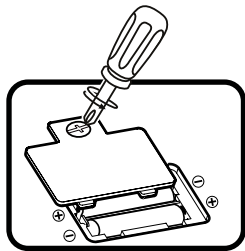

## WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

 
\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## PRODUCT FEATURES

### 1. Off/ Low/ High Volume Switch

To turn the unit **On**, slide the **Off/ Low/ High Volume Switch** located on the electronic module to the Low volume (🔊) or High volume (🔊🔊) position.

You will hear a sound, a phrase, three songs and 15 melodies. To turn the unit **Off**, slide the **Off/ Low/ High Volume Switch** to the **Off** (●) position.

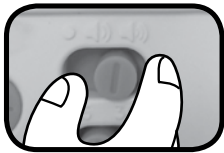

### 2. Automatic Shut-Off

To preserve battery life, the Twinkle Lights Owl will automatically power down after the selected time. The unit can be turned on again by pressing the **Music Button** or when the sound sensor detects baby's cry.

 
### NOTE:

This product is in try-me mode in the packaging. To activate normal play, turn the unit Off, then turn the unit to the Low volume (🔊) or High volume (🔊🔊) position. If the unit continuously powers down or the light fades out during play, please install a new set of batteries.

# ACTIVITIES


## 1. Music Button

Press the **Music Button** to hear 3 soothing songs followed by soft melodies, nature sounds and gentle white noise. Press the **Music Button** again to pause the sounds. This action will put the owl into sleep mode. You can only exit this mode by pressing the **Music Button** again. The light will fade in and out slowly with the sounds.

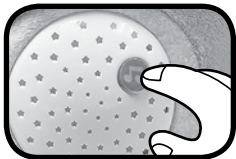


## 2. Light Control Button

 Press the **Light Control Button** to adjust the light intensity levels.

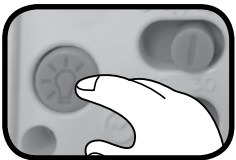

## 3. Timer Control Switch

 Slide the **Timer Control Switch** to select the desired preset time. Once the chosen timer has finished, the unit will enter sleep mode. If baby cry's the owl will exit sleep mode. Choose between the 15 or 30 minute timer.

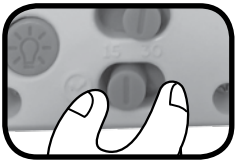

## 4. Sound Sensor

When the Owl is in sleep mode, soft melodies will play if baby's cry is detected. The sensor cannot be activated after being activated for more than 10 times in a row.

# MELODY LIST

1. Au Clair de la Lune
2. Three little Kittens
3. Mary Had a Little Lamb
4. Mulberry Bush
5. My Bonnie Lies Over the Ocean
6. On Top of Old Smokey
7. Pussy Cat, Pussy Cat
8. Ride A Cock Horse to Banbury Cross
9. Are You Sleeping?
10. Did You Ever See a Lassie?
11. To a Wild Rose
12. Give My Regards to Broadway
13. London Bridge
14. Lavender's Blue
15. Hickory, Dickory, Dock
16. Für Elise - Beethoven
17. Serenade - Haydn
18. Schubert's String Quintet in C - Adagio
19. Dance of the Sugar Plum Fairy - Tchaikovsky
20. Greensleeves
21. Spring Song - Mendelssohn
22. Cello Suite No. 1 in G Major - Bach
23. Sonata No.16 - Mozart
24. Kinderszenen - Schumann
25. Canon In D
26. Blue Danube Waltz - Strauss
27. Swan Lake Waltz - Tchaikovsky
28. Morning Mood - Greig
29. Sleeping Beauty Waltz
30. Ode to joy
31. Brahms' Lullaby
32. Rock-a-bye Baby
33. Hush Little Baby



# **SING-ALONG SONG LYRICS**

## **SONG 1**

Lullaby and sleep tight,  
Up above the moon is bright,  
Stars twinkle and dance,  
Sleep & dream till you wake.

## **SONG 2**

Sleep tight baby, cuddle up tight,  
The stars are out, all twinkling bright,  
Close your eyes, it's warm and snug,  
Dream along baby till you wake for a hug.

## **SONG 3**

Hush little baby,  
Time to sleep,  
I'll sing to you so you fall asleep.

# **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.
5. The Owl is surface washable only.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***

