

vtech[®]

Instruction Manual

Toddler Tech Laptop



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toddler Tech Laptop**. This laptop offers progressive, age-appropriate curriculum through 20 exciting activities. A friendly cat character encourages children as they learn lowercase and uppercase letters, phonics, words, maths, shapes, animals, food, logic, music and more! You can also customise your experience by entering your favourite food, character, background wallpaper and opening tune.

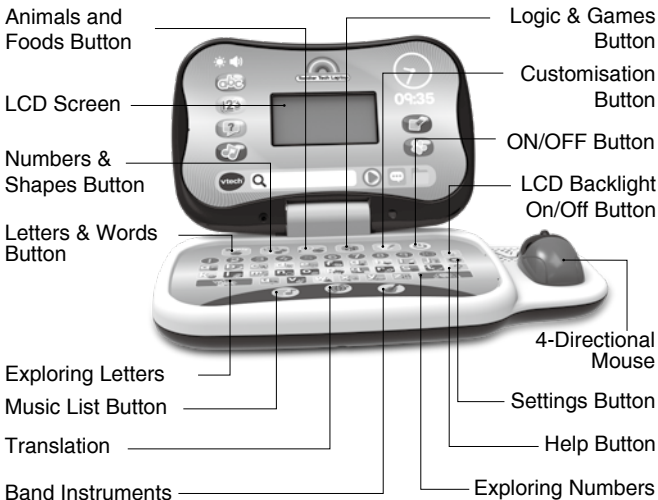

INCLUDED IN THE PACKAGE

- Toddler Tech Laptop
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

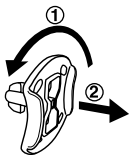


- ① Rotate the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

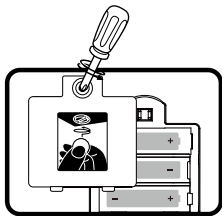

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product




The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **ON/OFF BUTTON** to turn the unit **ON** and press it again to turn the unit **OFF**.

2. SETTINGS BUTTON

Press the **SETTINGS BUTTON** to adjust the volume and screen contrast. Move the **MOUSE** left and right to select which item to adjust. Then move the **MOUSE** left and right to make the adjustments. Press the **MOUSE BUTTON** to confirm.

3. HELP BUTTON

Press this button to get some hints or repeat the instruction or question.

4. LCD BACKLIGHT ON/OFF BUTTON

Press this button to turn the **LCD BACKLIGHT** on or off.

5. LETTERS AND WORDS BUTTON

Press the **LETTERS AND WORDS BUTTON** to play language games. There are 4 games in this mode. Move the **MOUSE** left or right to choose an activity and then press the **MOUSE BUTTON** to confirm your choice.

6. NUMBERS AND SHAPES BUTTON

Press the **NUMBERS AND SHAPES BUTTON** to play maths and shape games. There are 4 games in this mode. Move the **MOUSE** left or right to choose an activity and then press the **MOUSE BUTTON** to confirm your choice.

7. ANIMALS AND FOODS BUTTON

Press the **ANIMALS AND FOODS BUTTON** to play science games. There are 3 games in this mode. Move the **MOUSE** left or right to choose an activity and then press the **MOUSE BUTTON** to confirm your choice.

8. LOGIC AND GAMES BUTTON



Press the **LOGIC AND GAMES BUTTON** to play logic games. There are 3 games in this mode. Move the **MOUSE** left or right to choose an activity and then press the **MOUSE BUTTON** to confirm your choice.

9. CUSTOMISE BUTTON



Press the **CUSTOMISE BUTTON** to customise your favourite food, wallpaper and opening tune.

10. EXPLORING LETTERS BUTTON



Press the **EXPLORING LETTERS BUTTON** to learn the letters, phonics and words. Press a letter button to play.

11. EXPLORING NUMBERS BUTTON



Press the **EXPLORING NUMBERS BUTTON** to learn the numbers. Press a number button to play.

12. MUSIC LIST BUTTON



Press the **MUSIC LIST BUTTON** to enjoy some music. After entering this game, move the mouse left or right to choose and then press the **MUSIC LIST BUTTON** to confirm your choice.

13. TRANSLATION BUTTON



Press the **TRANSLATION BUTTON** to learn French letters and words. Press the letter button to play.

14. BAND INSTRUMENT BUTTON



Press the **BAND INSTRUMENT BUTTON** to learn instrument names and hear instrument sounds. Move the **MOUSE** left or right to choose and then press the **MOUSE BUTTON** to confirm your choice.

15. MOUSE

Move the **MOUSE** up or down, left or right to make selections. Then press the **MOUSE** button to confirm your choice.



16. NUMBER BUTTONS



Press the **NUMBER BUTTONS** to learn numbers or to answer number related questions.

17. AUTO LEVELLING FEATURE

In most activities, after answering 3 questions correctly, the game automatically advances to the next level of difficulty. There are 3 challenging levels to explore.

18. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

ACTIVITIES:

The **VTech® Toddler Tech Laptop** offers a total of 20 fun activities.

LETTERS AND WORDS

1: Letter Order

The cat needs to use the letter bridge to get to the other side of the river. Some letters on the bridge are shown in the correct letter order. There is one block that is out of order. Help the cat complete the correct letter order. Move



the mouse up or down to select the letter and then press the mouse button to confirm.

2: Letter Quiz

There are 4 letters on the screen. Follow the instructions to find the lowercase and uppercase letters. Move the mouse up, down, left or right to find the correct letter within 30 seconds.



3: Missing Letter

Help the cat find the correct missing letter. A word is shown on the screen with one letter missing. The player can select from among three letter choices. Move the mouse left or right to select the letter and then press the mouse button to confirm.



4: Spatial Skills

Play hide-and-seek with the cat and learn spatial skills. Let's see where the cat is. Move the mouse left or right to scroll the picture and then press the mouse button to pick a picture to learn.



NUMBERS AND SHAPES

5: Exploring Shapes

The cat is using the laptop to learn about shapes. Move the mouse left or right to choose and then press the mouse button to learn about a shape and its related object.



6: Shape Counting

Some shapes appear on the screen. Count the shapes according to the instructions. Press the number buttons to answer.



 
7: Skip Count

Let's go fishing with the cat. Numbered fish are jumping out of the river on the left and right of the cat's platform. Skip count by 2, 5 or 10, according to the instructions. See the counter under the cat that reminds you of the numbered fish you caught. Move the mouse left or right to catch the numbered fish that comes next in the sequence. There are 5 fish to catch in each question.



8: Number Quiz

There are 4 numbers on the screen. Follow the instructions to pick the correct number within 30 seconds. Move the mouse up, down, left or right to play.



ANIMALS AND FOODS

9: Animal Sounds & Footprints

The cat is using the laptop to learn about animals. Choose a picture to hear an animal's sound and see its footprints. Move the mouse left or right to choose and then press the mouse button to confirm.



10: Which Animals?

The cat sees footprints on the ground or hears an animal sound. Choose the animal that corresponds by moving the mouse left or right and then press the mouse button to confirm. There are 4 choices with 3 chances for each question.



11: Fruits & Vegetables

The cat wants to bring some food back home. There are 10 kinds of fruit or vegetables shown on the screen one by one. Help the cat choose the correct foods according to the instructions. A counter is shown at the bottom right to keep track of the number of correct foods collected. Move the mouse left or right to choose and then press the mouse button to confirm.



LOGIC AND GAMES

12: Fix the Wall

The cat wants to fix his wall. The wall has a shaped hole in it. Choose the correct shape to repair the wall. Move the mouse left or right to choose and then press the mouse button to confirm.



13: Fishing Journey

Let's go fishing with the cat. Some fish are jumping out of the river on the left or right side. Catch as many fish as possible in 30 seconds. Move the mouse left or right to catch. Be careful to avoid the old cans or bottles. When the time is up, you will see the total number of fish caught.



14: River Crossing

Help the cat cross the river! Guide the cat across the stones to get to the other side within 1 minute. When the stone appears, move the mouse up, down, left or right to make the cat jump to the stone.



15: Customise

Let's add your personal information. You can include your favourite food and more!

- 1) Avatar: Create your own avatar by changing the hair, eyes, nose & mouth.
- 2) Favourite food: Select your favourite food. Press the first letter of your favourite food on the keyboard, and your food will show on the screen. The cat will announce your favourite food.
- 3) Opening wallpaper: Select your wallpaper and watch it display in the unit opening.
- 4) Opening tune: Select your opening tune and hear it play in the unit opening.



16: Exploring Letters

Press the **Exploring Letters Button** to learn letters, phonics and words. Press the letter button to play.



17: Exploring Numbers

Press the **Exploring Numbers Button** to learn numbers. Press the number button to play.



18: Music List

Let's enjoy the music! Choose a music style; Country, Rock or Jazz. Move the mouse left or right and then press the mouse button to



confirm a music style. Then press a number to select a melody to play. When the melody starts, the cat will begin to dance. Press any letter button to add fun sounds.

19. Translation

Let's learn French letters and words in this game. Press the letter button to play.



20: Band Instrument

The cat is using the laptop to learn about instruments. Choose a picture to learn the instrument name and hear its sound. Move the mouse left or right to choose and then press the mouse button to confirm.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2023 VTech Holdings Limited.
All rights reserved.
IM-524803-000
Version:0