

vtech[®]
Baby

Parent's Guide

Pop-a-ball[®] Rock & Pop Turtle



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years



4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

 
INTRODUCTION

Thank you for purchasing the **VTech® Pop-a-Ball® Rock & Pop Turtle**. Dropping the five included multicoloured balls into the turtle's tummy makes the turtle spin around on the floor, popping out the balls at random. By pressing the two buttons on the turtle's shell, your child will learn about numbers, turtle facts and much more through fun and encouraging phrases and sounds.

Light Up
Mouth

Tummy

5 Multicoloured
Balls

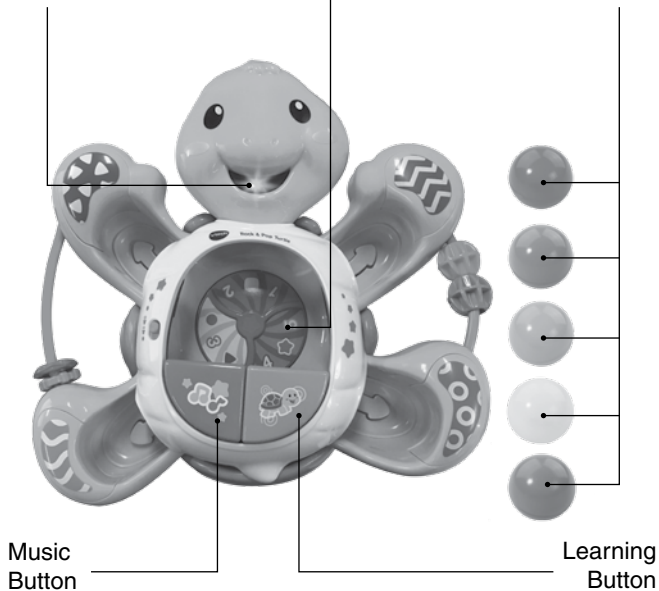

INCLUDED IN THIS PACKAGE

- One VTech® Pop-a-Ball® Rock & Pop Turtle
- Five multicoloured balls
- One parent's guide

WARNING: All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE: Please keep this parent's guide as it contains important information.

The legs of the turtle can pop up things in light weight. For safety, do not put other things into the tummy and legs of the the turtle except the balls provided.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the turtle. Use a screwdriver to loosen the screw.
3. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

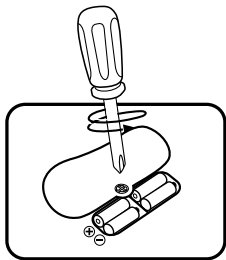

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES


1. On/Off/Volume Control Switch

To turn the unit **ON**, slide the **On/Off/Volume Control Switch** to the **Low Volume** (🔊) or **High Volume** (🔊) position. You will hear a song and a welcoming phrase. To turn the unit **OFF**, slide the **On/Off/Volume Control Switch** to the **OFF** (●) position.

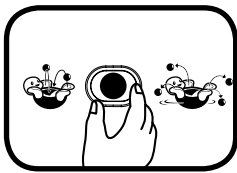

2. Mode Switch

 Slide the **Mode Switch** located on the bottom of the turtle to select the **Drop & Pop Mode** (🐢) or **Spin & Sing Mode** (🐢).

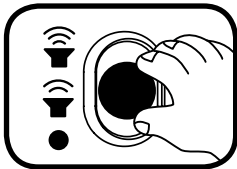

3. Automatic Shut Off

To preserve battery life, the **Rock & Pop Turtle** will automatically shut off after approximately two minutes without input. The **Rock & Pop Turtle** can be turned on again by pressing the buttons or by switching modes.

NOTE: If the **Rock & Pop Turtle** repeatedly shuts off, we suggest changing the batteries.

The infrared light sensors in the turtle's tummy are sensitive to sunlight. The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.

The motor does not work well under pressure. For optimal performance, do not press or hold the turtle down while the motor is running.

This product is in "try me" mode in the packaging. After opening the package, remove the "try me" tag from the back of the turtle, then turn it off and on to proceed with normal play.

ACTIVITIES

1. Music Button

Press the **Music Button** to hear playful melodies in **Drop & Pop Mode**, or playful songs in **Spin & Sing Mode**. When a melody or a song is playing, drop a ball into the turtle's tummy to hear fun sounds play over the music. The light will flash with the sounds.



2. Learning Button

Press the **Learning Button** to hear fun sounds, learn about parts of the turtle's body and colours in **Drop & Pop Mode**, or hear playful phrases and music in **Spin & Sing Mode**. When music is playing, drop a ball into the turtle's tummy to hear fun sounds play over the music. The light will flash with the sounds.



 
3. Two Play Modes

Drop a ball into the **Turtle's Tummy** to learn about numbers, hear playful phrases and music in **Drop & Pop Mode**, or to hear fun phrases and melodies in **Spin & Sing Mode**. When music is playing, drop a ball into the turtle's tummy to hear fun sounds play over the music. The light will flash with the sounds.



4. Popping Play

In **Drop & Pop Mode**, drop the multicoloured balls into the turtle's tummy to watch the balls pop out from the turtle's legs, into their tummy and onto the floor. In **Spin & Sing Mode**, drop the multicoloured balls into the turtle's tummy to watch them pop out onto the floor.

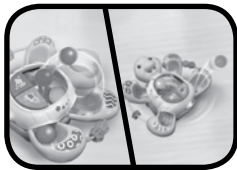

SING-ALONG SONG LYRICS

SONG 1

Popping and spinning's my favourite thing,
Whey-hey, poppity pop!
Just drop in a ball and then you will see,
Balls will swirl and pop around me!

SONG 2

Hey, listen to the music,
And move to the drum beat,
Dance and pop and spin la la la la!

SONG 3

How many numbers can you count?
1, 2, 3, 4, 5!
Let's count them out!

SONG 4

There was a turtle who liked to move,
Who liked to move, who liked to groove!
There was a turtle who liked to move,
And he always had lots of fun.

MELODY LIST

1. Can Can
2. Pop! Goes the Weasel
3. Glow Worm
4. When the Saints Go Marching In
5. Yankee Doodle
6. This Old Man
7. Turkey in the Straw
8. Ta Ra Ra Boom De Ay
9. Camptown Races
10. Old King Cole
11. Aiken Drum
12. A-Tisket, A-Tasket
13. Bingo
14. Twinkle, Twinkle, Little Star
15. Toyland

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, install a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546 810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003379-001 