

vtech[®]
baby

Instruction Manual

Touch & Feel Sensory Keys



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Feel Sensory Keys!**

This cute rattle is great for baby to play with! Press the light up button to trigger fun responses with a variety of music, sound effects and phrases, shake the rattle to hear fun sounds to add to the fun!

Light Up Button

**Off/Low/High Volume
Control Switch**



INCLUDED IN THIS PACKAGE

- Touch & Feel Sensory Keys
- Quick Start Guide


WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please save this Instruction Manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the Touch & Feel Sensory Keys, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
3. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
4. Replace the battery cover and tighten the screw to secure.

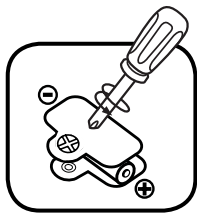

WARNING: Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Control Switch

To turn the unit **ON**, slide the **Off/Low/High Volume Control Switch** to the low volume (🔊) or high volume (🔊) position. To turn the unit **OFF**, slide the **Off/Low/High Volume Control Switch** to the **OFF** (●) position.



2. Automatic Shut-Off

To preserve battery life, the **Touch & Feel Sensory Keys** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing the light up button.

NOTE: If the unit repeatedly powers down while playing, please install a new set of batteries.

ACTIVITIES

1. Light Up Button

Press the light up button to hear fun phrases, songs, sounds and melodies. The light will flash with the sounds.



2. Motion Sensor

Shake the rattle to hear fun sounds. When a song or a melody is playing, shake the rattle again to add fun sounds on the top of the song or melody. The light will flash with the sounds.



3. Textured Teether

The soft textured teether stimulate the gums and promotes sensory development.

SONG LYRICS

Song 1

Hop in the car, we're ready to go,
Start the engine, where should we go?
Buckle up, it's time to go,
Let's cruise all around the town.

Song 2

I shake, shake my car keys,
And jump into the driver's seat.

Song 3

Jingle, jangle, 1-2-3,
Grab the keys,
Come on, let's go!

MELODY LIST

1. Bingo
2. The Wheels on the Bus
3. Yankee Doodle
4. Aiken Drum
5. Bicycle Built for Two
6. Diddle, Diddle Dumpling
7. The Entertainer
8. Good Morning Merry Sunshine
9. Hot Cross Buns
10. Jack and Jill
11. Little Boy Blue
12. Looby Loo
13. Muffin Man
14. My Bonnie Lies Over the Ocean
15. Pat-A-Cake

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

