



User's Manual



Repair Centre



© 2015 VTech Printed in China 91-003036-001 (P)







VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school



vtech Bally

stimulate their interest

in different textures, sounds and colours

...responding to colours,

...understanding cause

...learning to touch, reach,

grasp, sit-up, crawl and

sounds and textures

Tovs that will

lam...

and effect

toddle





To learn more about this and other VTech® products, visit www.vtech.co.uk








INTRODUCTION

Thank you for purchasing the VTech® Toot-Toot Drivers® Repair Centre learning toy!

Lift, fix and learn with the Toot-Toot Drivers® Repair Centre. This interactive repair shop features two floors of pretend play. The hot rod also responds to eight **SmartPoint**[™] locations on the play set.

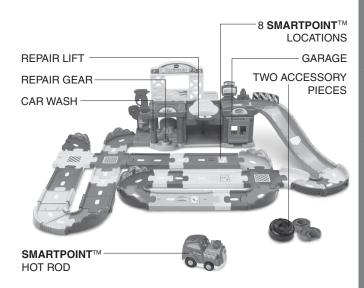









INCLUDED IN THIS PACKAGE



One **SmartPoint**™ hot rod



One **SmartPoint**™ base



One **SmartPoint**[™] paint station



One **SmartPoint**™ fuel station



One bottom wall



One top wall



One spanner storage piece



One fuel station accessory piece



One paint station accessory piece



One **SmartPoint**™ repair lift



One tyre accessory



One spanner accessory





(





One car wash track piece



One door support



One H-shape support



Two spiral supports



One straight support



One left repair lift support



(

One right repair lift support



One straight ramp track



Three cross tracks



Three SmartPoint™ tracks



Two straight tracks

(



One female connector track





(





One male connector track



Six male/female connector tracks



Four 90-degree tracks, female



Three 90-degree tracks, male



Two 60-degree tracks, female



Two 60-degree tracks, male



Two adjustable straight tracks

 


One adjustable curve track

Car Wash











WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:



- ① Turn the packaging lock counter-clockwise several times.
- 2 Pull out and discard the packaging lock.

GETTING STARTED BATTERY INSTALLATION – HOT ROD

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the hot rod. Use a screwdriver to loosen the screw.
- Install 2 new "AAA" (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.









BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.











Please stick the labels to the play set securely as indicated on the following page:

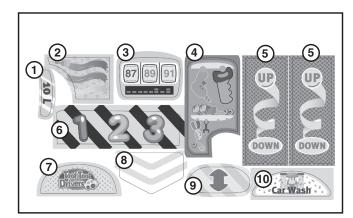

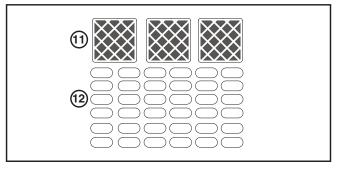







(

(

LABEL INSTRUCTIONS

(



ASSEMBLY INSTRUCTIONS

With the VTech® Toot-Toot Drivers® Repair Centre, safety comes first. To ensure your child's safety, adult assembly is required.

 Insert the bottom wall into the SmartPoint™ base. Then, insert the two spiral supports into the SmartPoint™ base as shown below.





 Insert the straight support into the SmartPoint™ base as shown below.







 
 Insert the left repair lift support into the SmartPoint[™] base. Then, insert the right repair lift support into the SmartPoint[™] base as shown below.



4. Insert the door support into the **SmartPoint**™ base as shown.



 Insert the SmartPoint™ repair lift into the four open slots as shown below.











 Insert the H-shape support into the SmartPoint™ base as shown below.



7. Insert the paint station accessory piece into the SmartPoint™ paint station as shown below. You will hear a "click" sound to indicate the paint station accessory piece is secure. Then, attach the SmartPoint™ paint station to the supports as shown below. Press down firmly to make sure the SmartPoint™ paint station is secure.





8. Insert the fuel station accessory piece into the SmartPoint™ fuel station as shown below. Press down firmly to make sure the fuel station accessory is secure. Then, attach the SmartPoint™ fuel station to the supports as shown below. Press down firmly to make sure the SmartPoint™ fuel station is secure.













9. Insert the top wall into the open slots as shown below.



 Attach the spanner storage piece to the car wash track piece. Then, attach the car wash track piece to the bottom of the SmartPoint™ base as shown below.





 Attach the straight ramp track to the SmartPoint[™] fuel station as shown below.





 






EXPAND & EXPLORE


Connect to the track pieces included (as shown below) or other **Toot-Toot Drivers**® play sets (each sold separately).



PRODUCT FEATURES - HOT ROD

1. ON/OFF SWITCH

 To turn the unit ON, slide the ON/OFF SWITCH to the ON (\oplus) position. To turn the unit OFF, slide the ON/OFF SWITCH to the OFF (\oplus) position.



2. AUTOMATIC SHUT-OFF

To preserve battery life, the hot rod included with the VTech® Toot-Toot Drivers® Repair Centre will automatically power-down after approximately 65 seconds without input. The unit can be turned on again by pressing the light-up face button, pushing the hot rod quickly or triggering a SmartPoint™ location.

Note: This product is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play.



 






ACTIVITIES - HOT ROD

 Slide the ON/OFF SWITCH to the ON position to turn the unit ON. You will hear a song, a phrase and sounds. The light will flash with the sounds.



 Press the light-up face button to hear hot rod sounds, songs and phrases. The light will flash with the sounds.



 Push the hot rod to hear fun sounds, and melodies. While a melody is playing, push the vehicle again to add in fun sounds on top of the melody. The light will flash with the sounds.



4. For added fun, the hot rod interacts with the Toot-Toot Drivers® Repair Centre. Simply roll or place the hot rod on one of the play set's SmartPoint™ locations to hear the hot rod play fun sounds, short tunes and phrases. The hot rod even interacts with other Toot-Toot Drivers® play sets (each sold separately).







ACTIVITIES - REPAIR CENTRE

 Put the included hot rod or any other Toot-Toot Drivers® SmartPoint™ vehicle (each sold separately) on one of the eight SmartPoint™ locations to hear fun phrases, sounds and music. (SmartPoint™ vehicles only. Other vehicles sold separately.).



Move the hot rod into the CAR WASH, and pretend to get the hot rod sparkly clean.



 Pull up to the SmartPoint™REPAIR LIFT, and raise the lift to the first floor. Then, place one of the two included accessory pieces on the repair gear and turn it to simulate repairing the hot rod.



 Place the SmartPoint™ hot rod in the PAINT AREA, and move the paint gun back-and-forth for role-play fun.











 Go to the FUELING AREA, and move the nozzle up and down for role-play fun. Once fueled up, race down the ramp in the freshly tuned up hot rod.



 Open the garage door and park the SmartPoint™ hot rod inside for some rest



CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.







TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit sit for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.













PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.



- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
 - Please include details of the fault together with your name and address.
- To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.





