

vtech[®]
Baby

User's Manual

First Steps™ Baby Walker



© 2012 VTech
Printed in China
91-002726-007 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® First Steps™ Baby Walker**!

The **VTech® First Steps™ Baby Walker** is both a functional walker and a fun learning toy for toddlers aged 6 - 30 months. Your child will enjoy learning about colours, numbers, animals, shapes and much more! The electronic activity panel can be easily removed from the walker for extra sit-down fun!

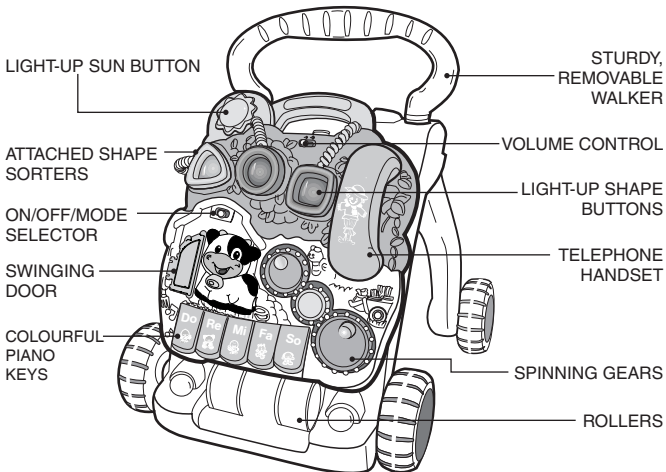

INCLUDED IN THIS PACKAGE

- One electronic activity panel
- One main walker body
- Two legs with wheels
- One walker handle
- One telephone handset
- One user's manual

 
WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the electronic activity panel. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

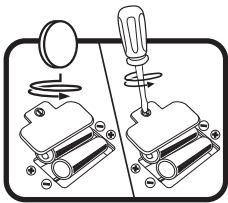

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com


To ensure your child's safety, adult assembly is required. Please ensure that the legs, handle and activity panel are securely locked into position to avoid injury. ADULT SUPERVISION REQUIRED AT ALL TIMES.

The activity panel can be used alone for sit-down play (6+ months) or while attached to the walker (12+ months).

sit-down play
(6+ months)

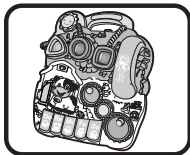


Walker
(12+ months)

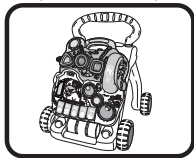 


ASSEMBLY INSTRUCTIONS

 1. Insert the legs into the slots with the wheels facing outward, as shown in the diagram.


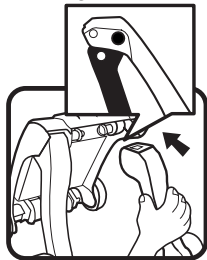


 2. Insert the handle into the slots until they click into place.

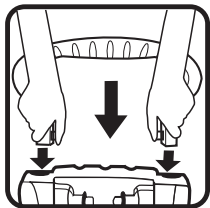

Attaching/Removing the Activity Panel

  
1. To attach the activity panel, align the bottom of the activity panel to the bottom of the walker, then push it back until the release lock located above the Volume Control Switch clicks. Please ensure the activity panel is attached securely to the walker.
2. To remove the activity panel, locate the release lock above the Volume Control Switch. Slide the lock up and lift the activity panel, removing it from the walker.

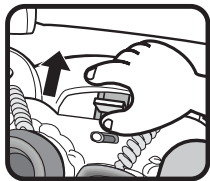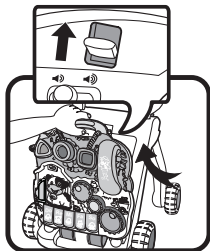

PRODUCT FEATURES


1. ON/OFF/MODE SELECTOR SWITCH

 To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** or the **MUSIC MODE** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.

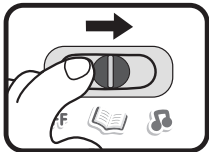

2. VOLUME CONTROL SWITCH

 Slide the **VOLUME CONTROL SWITCH** to either the Low Volume or High Volume position.

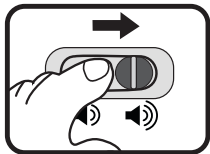


3. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® First Steps™ Baby Walker's** electronic activity panel will automatically power-down after approximately 60 seconds without input. The unit can be turned on again by pressing any button. Pushing the walker will not turn on the activity panel.


ACTIVITIES

1. In **Learning Mode**, insert the shape sorters or press the three shape buttons to learn shapes and numbers. The lights will flash with the sound.

 
In **Music Mode**, insert the shape sorters or press the three shape buttons to hear upbeat melodies and fun sound effects. The lights will flash with the sound.

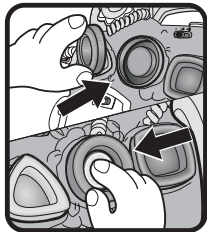

 
2. In both modes, press the light-up sun button to hear upbeat melodies and fun sound effects. The lights will flash with the sound.

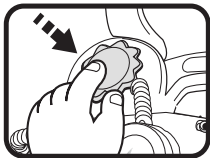

 
3. In both modes, pick up the phone to hear fun phrases. The lights will flash with the sound.

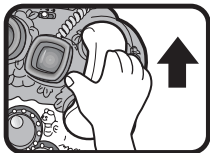

 4. In both modes, spin the three spinning gears to hear a fun phrase, sound effects or a melody. The lights will flash with the sound.

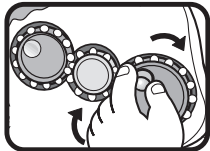

 5. Open or close the swinging door to play hide-and-seek with the ducks.

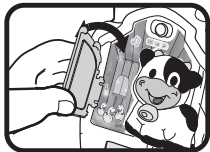


6. In **Learning Mode**, press the piano keys to learn colors, animal sounds and music notes. The lights will flash with the sound.

In **Music Mode**, press the piano keys to play piano notes. When a melody is playing, pressing the piano keys will play fun animal sounds on top of the melody. The lights will flash with the sound.



 7. While using the activity panel with the walker, the panel is motion-activated to play melodies and sound effects as the child pushes the walker.

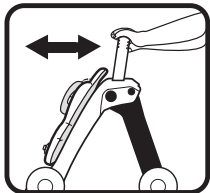

MELODY LIST

1. Old MacDonald Had a Farm
2. The Glow Worm
3. Pop! Goes the Weasel
4. Oh Susanna!
5. Mary Had a Little Lamb
6. Hey Diddle Diddle
7. Turkey in the Straw
8. Polly Wolly Doodle
9. Alouette
10. Home on the Range
11. B-I-N-G-O

SUNG SONG LYRICS (Tune of “Old MacDonald Had a Farm”)

Welcome to our learning farm,
We have lots to show you.
Shapes and colours, music, too.
There's so much to do!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT

vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com

