

TREEFU TOM

User's Manual

Learn & Go



vtech[®]

TREE FU TOM™ BBC & FremantleMedia Ltd.

© 2014 VTech
Printed in China
91-009666-000 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the VTech® Tree Fu Tom Learn & Go.

Join Tom and his friends on a learning adventure! The VTech® Tree Fu Tom Learn & Go introduces age appropriate curriculum in a fun and engaging way. 8 exciting activities include letters, vocabulary, maths, logic, music and more! Tree Fu Go!

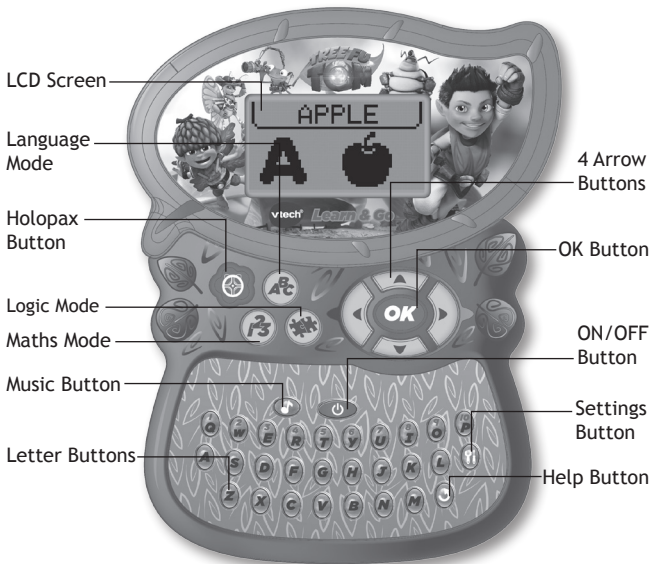


INCLUDED IN THIS PACKAGE

- One VTech® Tree Fu Tom Learn & Go
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

Note: Please keep this user's manual as it contains important information.

 Unlock the packaging locks:




① Rotate the packaging lock 90 degrees anti-clockwise.

② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is OFF.
2. Locate the battery cover on the back of the unit.
3. Install 2 new "AA" Size (AM3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

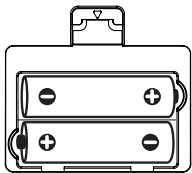

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.

- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the ON/OFF BUTTON to turn the unit ON and press it again to turn the unit OFF.

2. MUSIC BUTTON

Press the MUSIC BUTTON to hear fun melodies and watch Tom and his friends dance.

3. SETTINGS BUTTON

Press the SETTINGS BUTTON to adjust the screen contrast and volume or to turn the background music on or off. Use the up and down ARROW BUTTONS to select which item to adjust then press the left and right ARROW BUTTONS to make adjustments. Press the OK BUTTON to return to the main menu.

4. MODE BUTTONS

Press one of the three MODE BUTTONS to choose activities in LANGUAGE MODE, MATHS MODE or LOGIC MODE.

5. HOLOPAX BUTTON

Press the HOLOPAX BUTTON to play a shadow match game.

6. OK BUTTON

Press the OK BUTTON to confirm your choice.

7. 4 ARROW BUTTONS

Press the ARROW BUTTONS to move or to make a selection in a menu or activity.



8. LETTER BUTTONS

Press the **LETTER BUTTONS** to learn letters or to answer letter related questions.



9. NUMBER BUTTONS

Press the **NUMBER BUTTONS** to learn numbers or to answer number related questions.



10. HELP BUTTON



Press the **HELP BUTTON** to hear an instruction or question repeated.

11. AUTOMATIC SHUT-OFF

To preserve battery life the unit will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

ACTIVITIES

The VTech® Tree Fu Tom Learn & Go offers a total of 8 fun activities to play.

LANGUAGE MODE



1. Letters & Words

Explore and learn in Treetopolis with Treetog. Press the **LETTER BUTTONS** to learn letters & words.



2. Letter Tunnels

Help Squirmtum choose the correct tunnels to find his friends. Press a **LETTER BUTTON** or use the **ARROW BUTTONS** to choose then press **OK** to answer. After three correct answers a character will be found.

 


MATHS MODE



1. Sap Day Bun Counting

Count how many sap day buns Rickety has made then press a **NUMBER BUTTON** to answer.



2. Chuckleberry Sorting

Help Ariela sort the chuckleberries. Use the **ARROW BUTTONS** to choose then press **OK** to answer.



LOGIC MODE



1. Nectar Collection

Help Twigs collect the nectar. Use the **ARROW BUTTONS** to move the bowl left and right to collect the drops of nectar. See how much you can collect!



2. Big World Magic

Tom needs your help to save the day. Remember the moves he makes then use the **ARROW BUTTONS** to repeat them. There are 4 levels in this game. Level 1 = 1 move, level 2 = 2 moves, level 3 = 3 moves and level 4 = 4 moves. Level up after 3 correct answers.



MUSIC TIME



It's music time! Join Tom and his friends for a dance! Press a **NUMBER BUTTON** or use the **ARROW BUTTONS** to choose then press **OK** to pick a melody.



WHO IS THAT?



The Holopax isn't working properly. Let's help Tom work out who it is. Use the **ARROW BUTTONS** to choose then press **OK** to answer.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

TECHNICAL SUPPORT

If you have a problem that cannot be solved by using this manual, we encourage you to visit us online or contact our Consumer Services Department with any problems and/or suggestions that you might have. A support representative will be happy to assist you. Before requesting support, please be ready to provide or include the information below:

- The name of your product or model number (the model number is typically located on the back or bottom of your product).
- The actual problem you are experiencing.
- The actions you took right before the problem started.

Internet: www.vtechuk.com

Phone: 01235 546810 (from UK), or +44 1235 546810 (outside UK)

IMPORTANT NOTE:

Creating and developing VTech® preschool learning products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

